

Fig.1

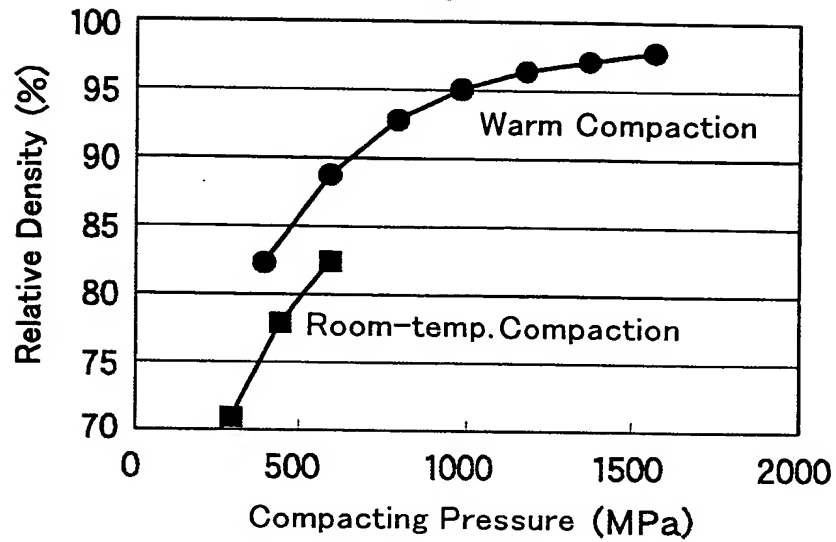


Fig.2

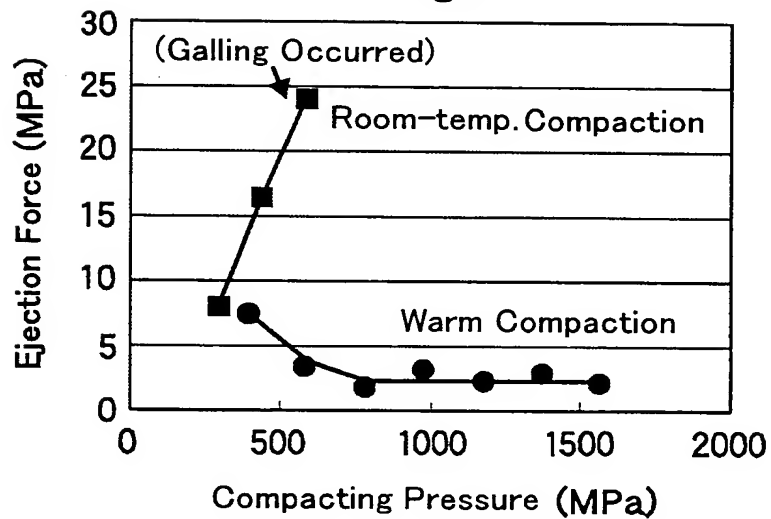


Fig.3

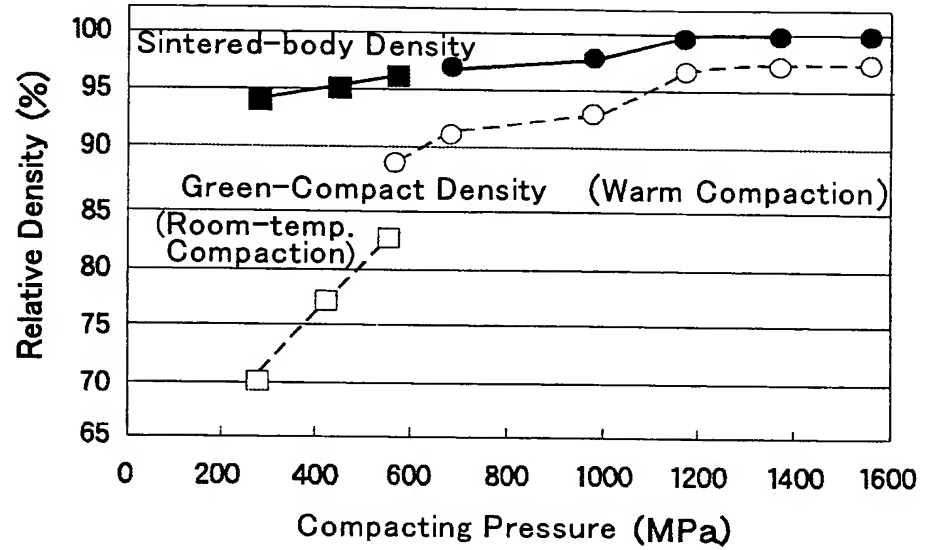


Fig.4

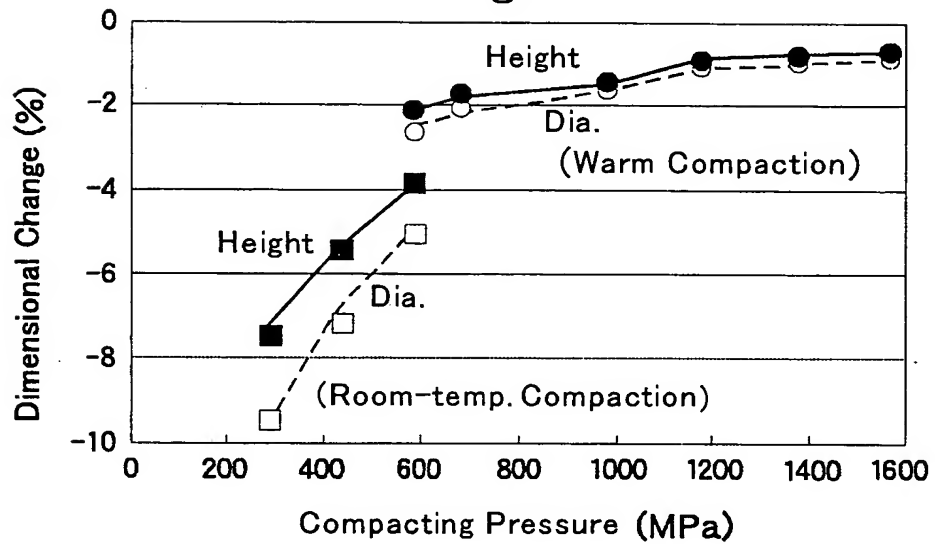


Fig.5

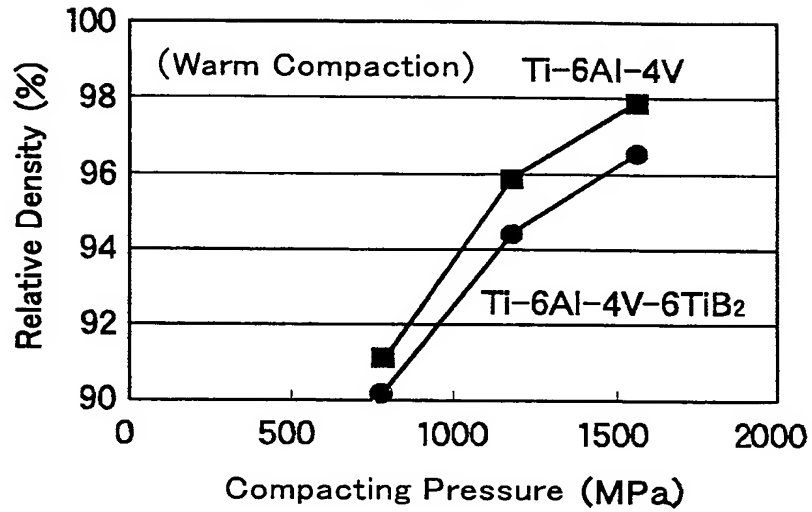


Fig.6

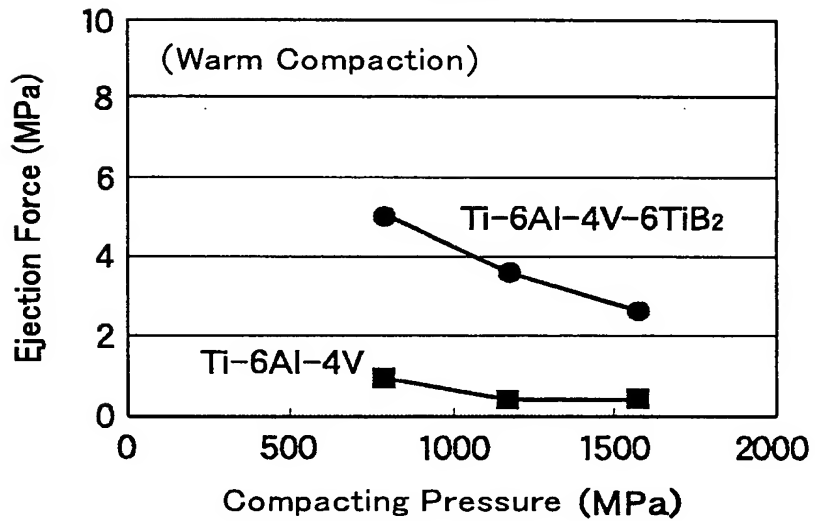


Fig.7

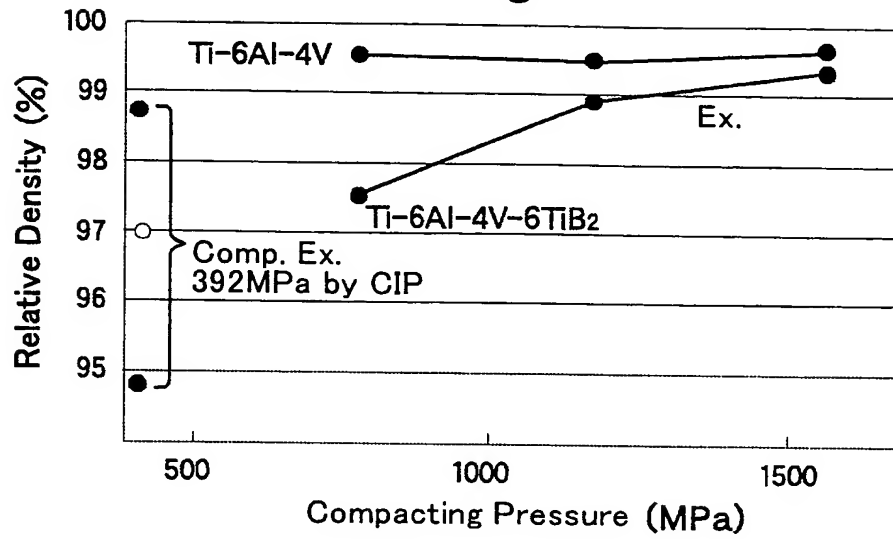


Fig.8

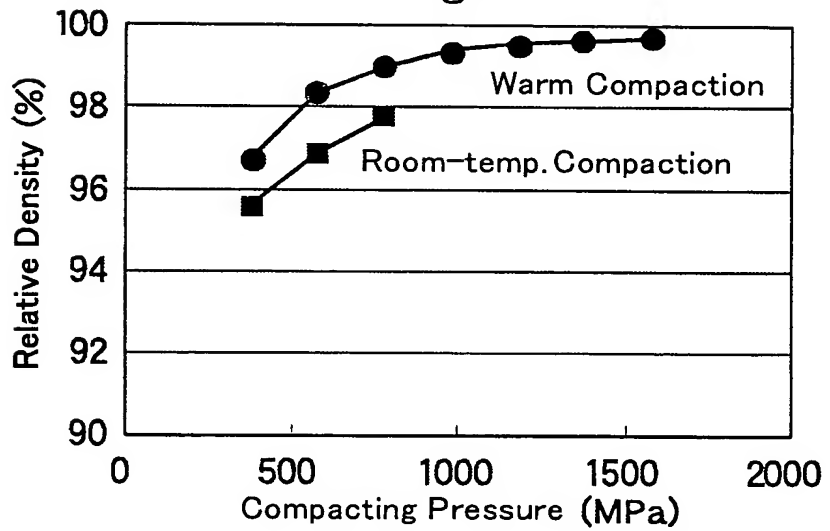


Fig.9

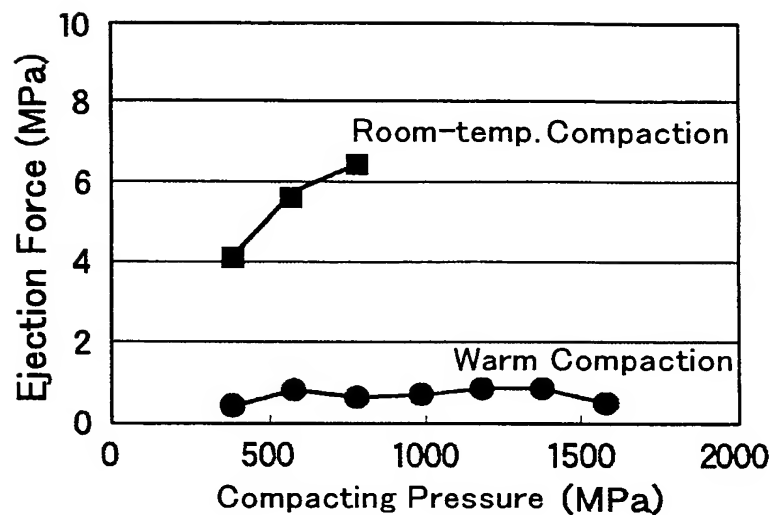


Fig.10

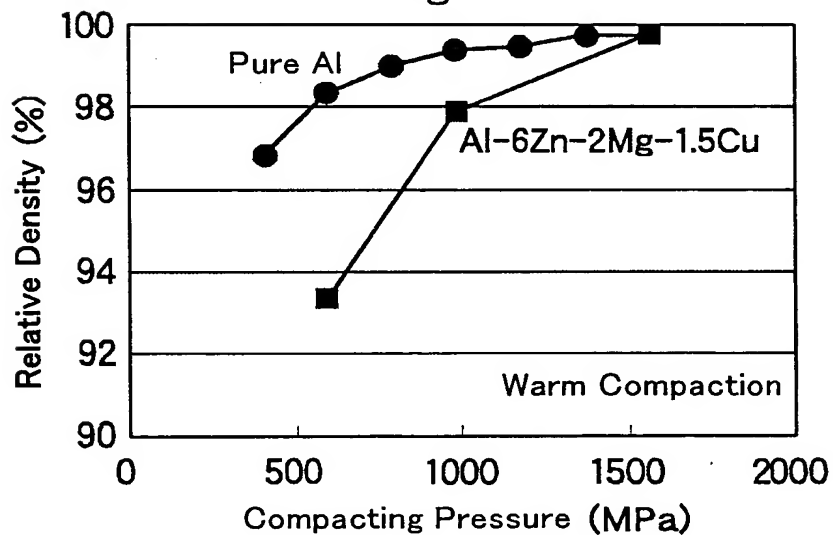


Fig.11

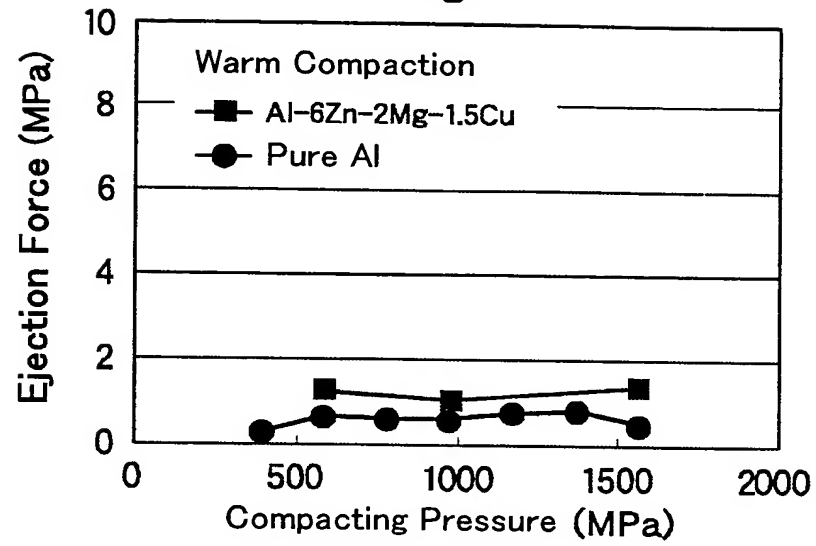


Fig.12

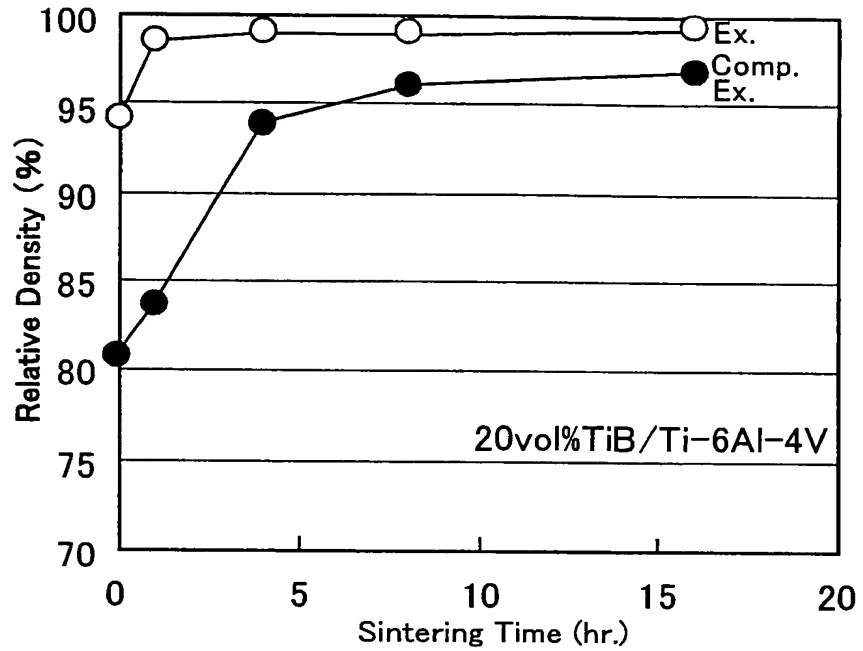


Fig.13

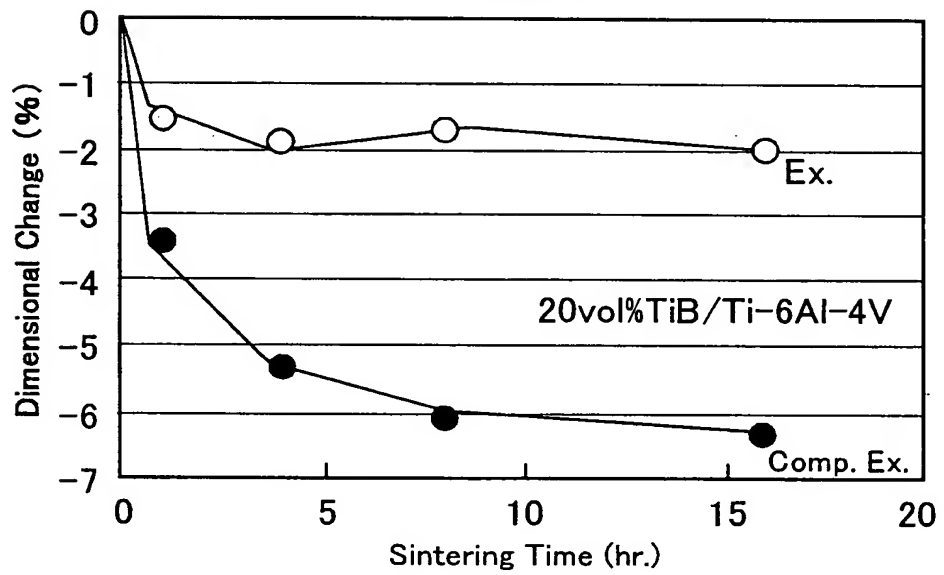


Fig.14

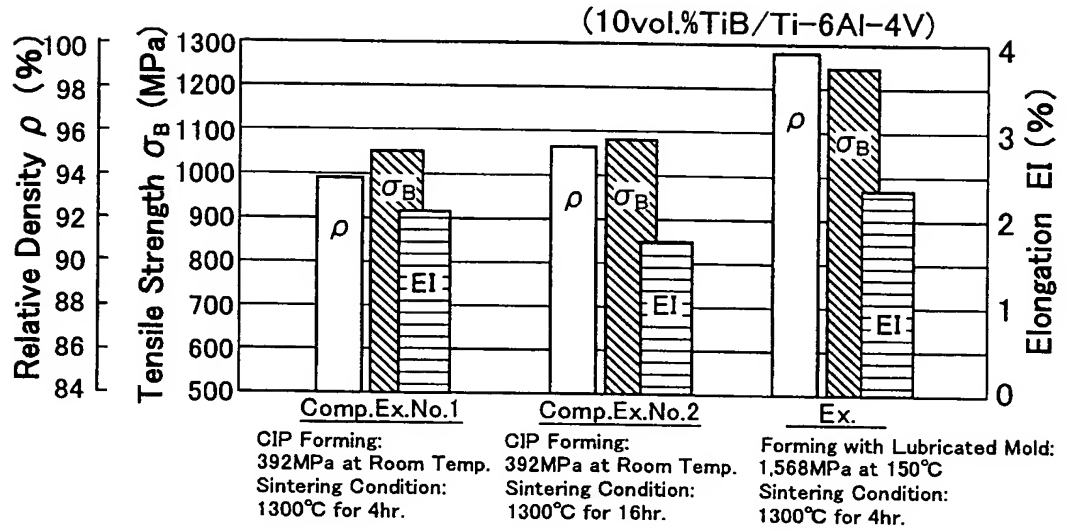


Fig.15


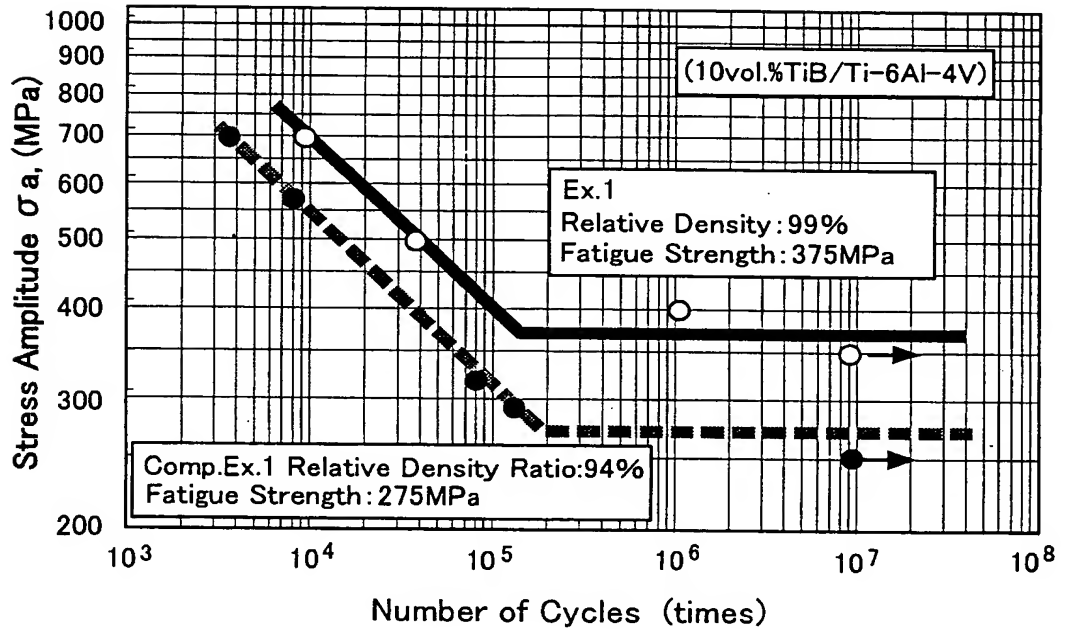





FIG.16



Ti

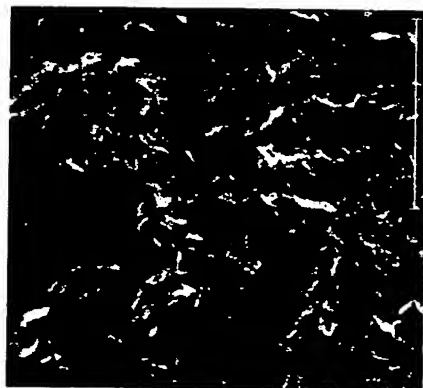

Li

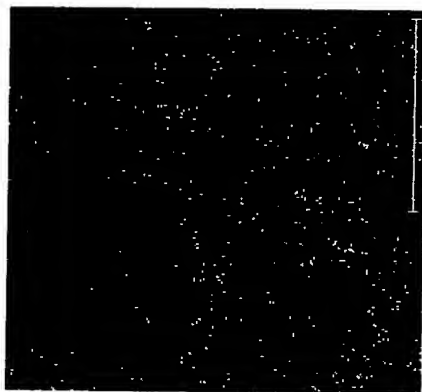


Stearate

After Ultrasonic Washing, Size:  $200\ \mu\text{m} \times 200\ \mu\text{m}$

FIG.17



Al

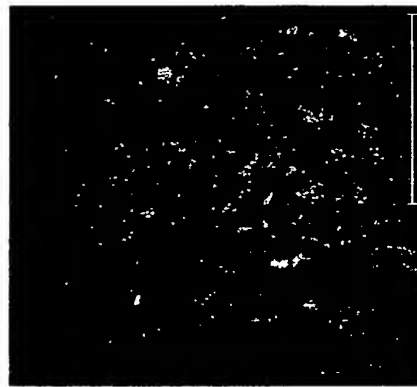

Li



Stearate

As Formed, Size:  $200\text{ }\mu\text{m} \times 200\text{ }\mu\text{m}$